



recommended assembly method

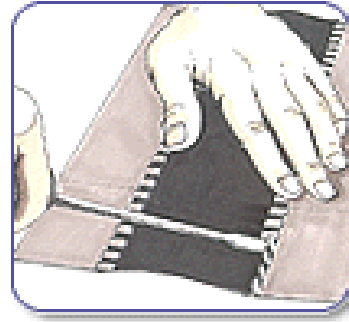


1. Cut to length plus an overlap of 6 cm.



2. Lift the seam outwards.

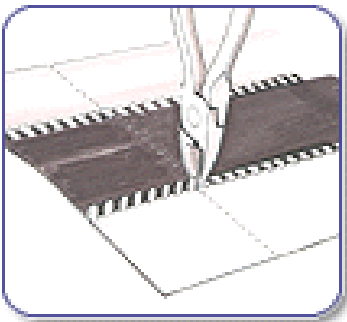


3. Make a cut at the edge.

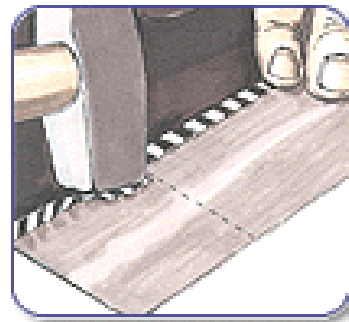

4. Bend down the seam while cloth remains fastened.



5. Coat the cloth with adhesive and press together firmly.

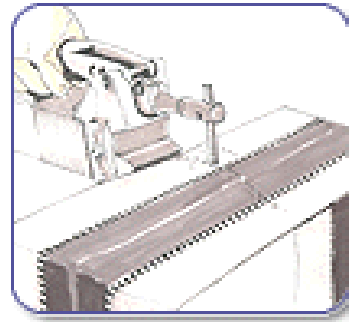

6. Spotweld the steel.